


artpoligraf

Visual Fabric Desk




SQUARE

Hardware

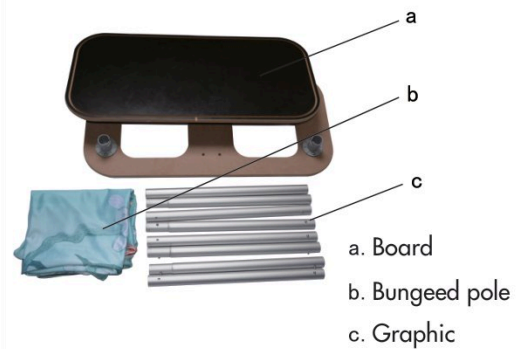


FRAME INSTALLATION

1

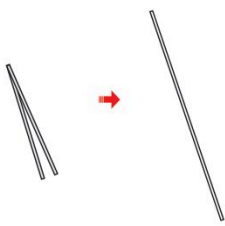


Assemble all the bungeed poles.

2

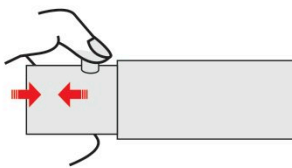


Press down on the lock and connect the pieces together. The lock will automatically pop out meaning the piece is locked into place.

3

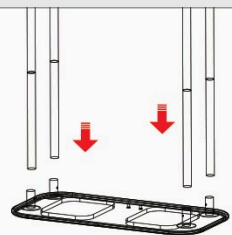

Insert the bungeed pole into the plastic flange plate.

4

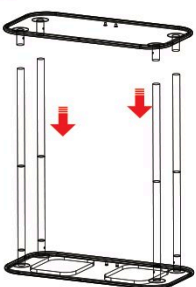


Connect the top board with the other ends of poles.

5




Spin the pole make sure the tube is locked into place.

6

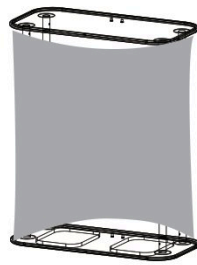


Put the graphic on the frame.

7

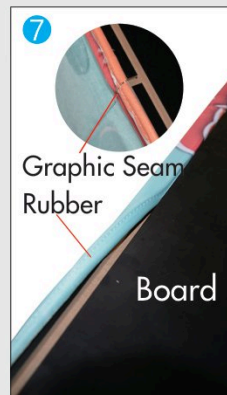

Stuff sewed rubber into slot of the two boards and zip up. Make sure the graphic seam align at the rabbit.

8

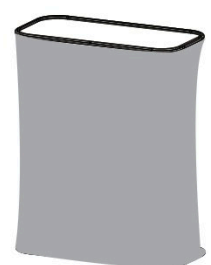

There you have it.